

ZICO zi-1015

VOLTAGE TESTER MODEL OPERATING INSTRUCTION



Please read this manual before switching the unit on.
Important safety information inside.

www.zicotech.com

Contents	Page
1. Safety.....	4
1.1 International Safety Symbols.....	4
1.2 Safety Notes.....	5
1.3 Warnings.....	5
1.4 The safety can no longer be insured if the instrument.....	6
1.5 Safety Advices.....	6
2. Appropriate Usage.....	7
3. Specifications.....	7
4. Voltage Tester Description.....	9
5. Operation.....	10
5.1 Preparing the test.....	10
5.2 Voltage Test.....	10
5.3 Single-pole phase Test.....	11
5.4 Continuity Test.....	11
5.5 Rotary Field Indication.....	12
5.6 Measurement Point illumination.....	13
5.7 Maintenance.....	13
5.8 Cleaning.....	13
5.9 Battery Replacement.....	13

1. Safety

1.1 International Safety Symbols

 Warning of a potential danger, comply with instruction manual.

 Caution! Dangerous voltage. Danger of electrical shock.

 Double insulation.

 Important information. Consult the instruction sheet.

 Hazardous Voltage.

 Suitable for live working.

 This product complies with the WEEE Directive (2012/19/EU)

 Conforms to European Union Directives.

 TÜV Association for Electrical, Electronic & Information Technologies; following rules of "Geprüfte Sicherheit."












CAT III Measurement Category III is applicable to test and measuring circuits connected to the distribution part of the building's low-voltage MAINS installation.

CAT IV Measurement Category IV is applicable to test and measuring circuits connected at the source of the building's low-voltage MAINS installation.

1.2 Safety Notes

- Reference. Please use utmost attention.
- Do not exceed the maximum allowable input range of any function
- Insulated personnel body protective equipment up to 1000V.
- The unauthorized persons are not to be allowed to disassemble the voltage detector.

1.3 Warnings

-  In order to avoid electrical shock, the valid safety and VDE regulations regarding excessive contact voltages must receive utmost attention, when working with voltages exceeding 120V (60V) DC or 50V (25V) rms AC. The values in brackets are valid for limited ranges (as for example medicine and agriculture).
-  Prior to measurement ensure that the test leads and the test instrument are in perfect condition.
-  When using this instrument only the handles of the probes may be touched - do not touch the probe tips.
-  This instrument may only be used within the ranges specified and within low voltage systems up to 1000V.
-  Prior to usage ensure perfect instrument function (e.g. on known voltage source).
-  The voltage detector is not to be used, if the battery box is open.
-  The voltage detectors have to be kept dry and clean.
-  The voltage testers may no longer be used if one or several functions fail or if no functionality is indicated.
-  Do not use this instrument under damp conditions.
-  Perfect display is only guaranteed within a temperature range of -10°C up to +55°C, at relative humidity question < 85%.
-  If the operator's safety cannot be guaranteed, the instrument must be removed from service and protected against use.

1.4 The safety can no longer be insured if the instrument:

- Shows obvious damage
- does not carry out the desired measurements
- has been stored for too long under unfavorable conditions
- has been subjected to mechanical stress during transport.

All relevant statutory regulations must be adhered to when using this instrument

1.5 Safety Advices

- Depending on the internal impedance of the voltage detector there will be a different capability of indicating the presence or absence of operating voltage in case of the presence of interference voltage.
- A voltage detector of relatively low internal impedance, compared to the reference value of 100 k Ω , will not indicate all interference voltages having an original voltage value above the ELV level. When in contact with the parts to be tested, the voltage detector may discharge temporarily the interference voltage to a level below the ELV, but it will be back to the original value when the voltage detector is removed.
- When the indication “voltage present” does not appear, it is highly recommended installing earthing equipment before work.
- A voltage detector of relatively high internal impedance, compared to the reference value of 100 k Ω , may not permit to clearly indicate the absence of operating voltage in case of presence of interference voltage.
- When the indication “voltage present” appears on a part that is expected to be disconnected of the installation, it is highly recommended confirming by another means (e.g. use of an adequate voltage detector, visual check of the disconnecting point of the electric circuit, etc.) that there is no operating voltage on the part to be tested and to conclude that the voltage indicated by the voltage detector is an interference voltage.
- A voltage detector declaring two values of internal impedance has passed a performance test of managing interference voltages and is (within technical limits) able to distinguish operating voltage from interference voltage and has a means to directly or indirectly indicate which type of voltage is present.

2. Appropriate Usage

The instrument may only be used under those conditions and for those purposes for which it was conceived. For this reason, in particular the safety references, the technical data including environmental conditions and the usage in dry environments must be followed.

When modifying or changing the instrument, the operational safety is no longer ensured.

The instrument may only be opened by an authorized service technician, e.g. for fuse replacement.

The voltage detectors are designed to be used by skilled persons and in accordance with safe methods of work.



3. Specifications

LEDS	
LED voltage range	12V to 1000V AC/DC
LED resolution	±12,24,50,120,230, 400, 690,1000V AC/DC
Tolerances	-30% to 0% of reading
Frequency range	0/40Hz to 400Hz
Response time	≤1second
Auto power on	Auto power on ≥12V ac/dc
LCD	
LCD display	1999 counts (3 1/2 digit) LCD display with bargraph & backlight
Voltage range	6 V to 1000 V AC/DC
Resolution	1V AC/DC
Tolerances	±3.0% of reading ±5 digit
Frequency range	0/40Hz to 400Hz
Response time	≤1second
Auto power on	Auto power on ≥ 6V AC/DC
Range detection	automatic
Polarity detection	Full range
Range detection	Automatic
Internal basic load impedance Peak current	Maximum 3.5 mA at 1000 V 350 kΩ / Is < 3.5 mA (no RCD tripping)

Operation time	Duration Time = 30 seconds
Recovery time	Recovery Time = 240 seconds
Continuity Test	0 to 400 k Ω
Accuracy	nominal resistance +50 %
Test current	$\leq 5 \mu\text{A}$
Single-pole Phase Test	100V to 1000V AC
Frequency range	50 Hz to 400 Hz
Rotary Field Indication	
Voltage range (LEDs)	100...1000V
Frequency range	50/60Hz
Measurement principle	Double-pole and contact electrode
Safety standards	EN61243-3:2014
Agency approvals	TÜV-GS
Overvoltage protection	1000V AC/DC
Measurement category	CATIII 1000V/CATIV 600V
Protection degree	IP64
Power supply	2x1.5V "AAA" Batteries
Power consumption	max.30mA / approx. 250mW
Temperature range	-10 °C up to 55 °C
Humidity	max.85% relative humidity

4. Voltage Tester Description:

1. Handle test probe – (L1)
2. Instrument test probe + (L2)
3. LEDs for voltage display
4. measurement point illumination
5. LED for AC voltage
6. LED for positive voltage
7. LED for “⚡” warning voltage mode display
8. LED for negative voltage
9. LED for left rotary field
10. LED for right rotary field
11. LED for continuity
12. 2000 Counts LCD display
13. HOLD Button
14. Measurement point lighting Button
15. Battery case
16. Probe tip Protective cap (with storage compartments for probe tip cover and probe tip extension)
17. Probe tip cover
18. Probe tip extension (diameter 4 mm, screw-on)

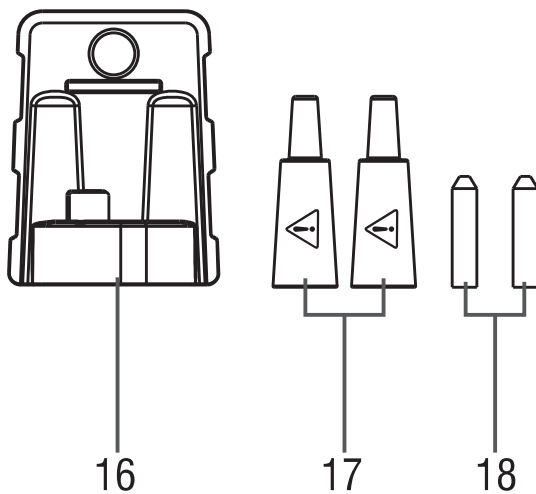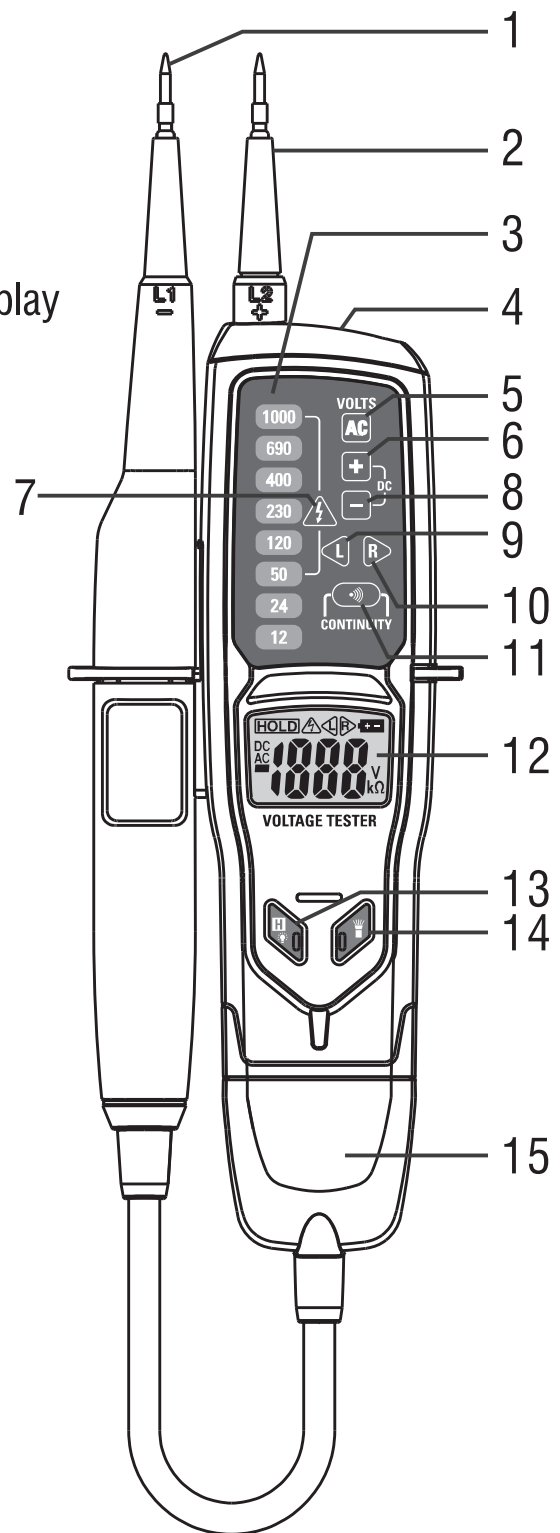

5. Operation:

5.1 Preparing the test

Prior to every test, please ensure that the instrument is in perfect condition:


- For example, keep an eye out for a broken housing or leaking batteries.
- Before using a voltage detector with audible indicator at locations with a high background noise level, it has to be determined whether the audible signal is perceptible.
- Always carry out a function test before using the voltage tester, see below.
- Check that the instrument is functioning properly (for example at a known voltage source) before and after every test.
- If the safety of the user can not be guaranteed, switch off the instrument and secure it to prevent unintentional usage.


Carrying out a function test

Connect the voltage tester probe tips for 4 to 10 seconds and then disconnect. All LEDs should light up. All segments are illuminated on the LCD display.


5.2 Voltage Test

- Connect both test probes with power source.
 - As from a voltage of $>6V$ the voltage tester switches on automatically.
 - The voltage is displayed via LEDs.
- The different indicating signals of the voltage detector (including the ELV limit indication) are not to be used for measuring purposes.
- The voltage is also shown on the LCD display.

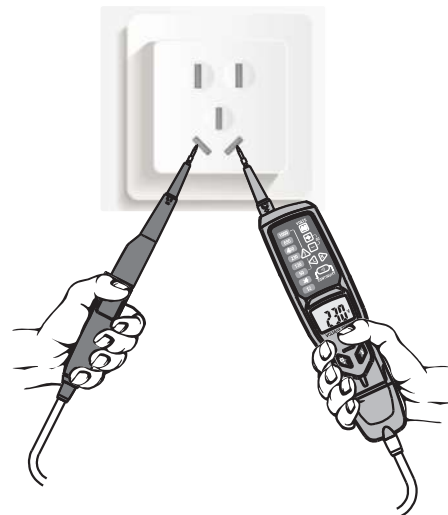


- For AC voltage, the “AC” is illuminated;
For positive voltage, the “+” is illuminated;
For negative voltage, the “-” is illuminated.
- In the case of DC voltage, the polarity of the indicated voltage relates to the voltage tester probe tip
- Once the safety extra-low voltage (50V AC /120V DC) is reached or exceeded, an acoustic signal is emitted, and the “” is illuminated.
- Once voltage is applied to the measuring instrument, press the HOLD button, the LCD and LEDs display shows the recorded reading.
To delete the recorded value, press the HOLD button once again. the LCD and LEDs display once again indicates the voltage currently being applied to the probe tips.

5.3 Single-pole phase Test

- The single-pole phase test is only possible when batteries are installed and in good condition.
- The single-pole phase test starts at an AC voltage of approx. 100V (pole > 100V AC).
- When using single-pole phase tests to determine external conductors the display function may be impaired under certain conditions (e.g. for insulating body protective equipment on insulation locations).
- The single-pole phase testing is not appropriate to determine whether a line is live or not. For this purpose, the double-pole voltage test is always required.
- Connect both test probes with power source.
- A signal sound indicates the phase.
- The “” LED is illuminated in the display.

5.4 Continuity Test


The continuity test is only possible when batteries are installed and in good condition. A signal sound is audible for continuity and the LED for continuity LED  (11) is illuminated.

5.5 Rotary Field Indication

The voltage testers are equipped with a double-pole rotary field indicator.


The rotary phase indication is always active. The symbols “R” or “L” are always displayed. However, the rotary direction can only be determined within a three-phase system. Here, the instrument indicates the voltage between two external conductors.

- Connect the instrument test probe with the supposed phase L2 and the handle test probe with the supposed phase L1.
The voltage and the rotary field direction are displayed.
“R” signifies that the supposed phase L1 is the actual phase L1 and the supposed phase L2 is the actual phase L2.

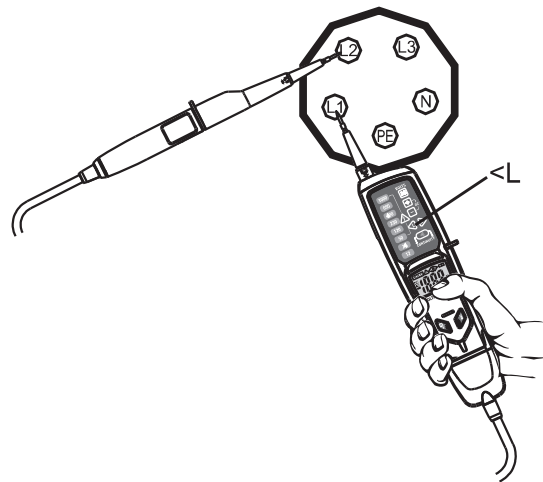

“L” signifies that the supposed phase L1 is the actual phase L2 and the supposed phase L2 is the actual phase L1.

When re-testing with exchanged test probes the opposite symbol has to be illuminated.

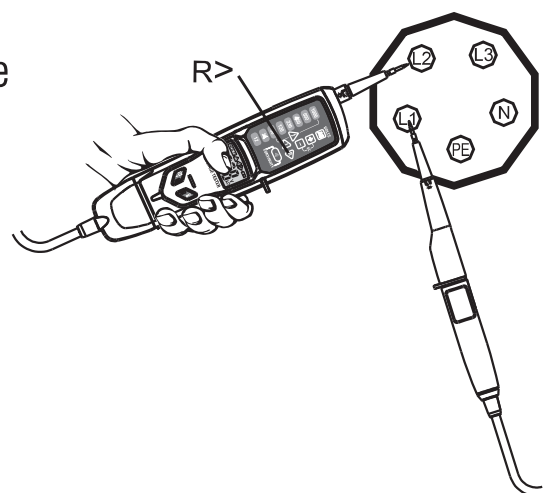

5.6 Measurement Point illumination

Voltage testers are equipped with a measurement point illumination feature. Thus, working under bad lighting conditions (e.g. division switch cabinets) is made easier.

Press button for measurement point illumination (4) on instrument rear.

5.7 Maintenance

When using voltage testers in compliance with the instruction manual, no particular maintenance is required. If functional errors occur during normal operating, our service department will check your instrument without delay.

5.8 Cleaning

Prior to cleaning, remove voltage test from all measurement circuits. If the instruments are dirty after daily usage, it is advisable clean them by using a damp cloth and a mild household detergent. Never use acid detergents or dissolvents for cleaning.

After cleaning, do not use the voltage tester for a period of approx. 5 hours.

5.9 Battery Replacement

If no signal sound is audible when short-circuiting the test probes, proceed with the battery replacement.

- Completely disconnect voltage tester from the measurement circuit.
- Remove discharged screw , battery cover and batteries.
- Replace by new batteries, two type “AAA” by respecting correct polarity.
- Close the battery cover and re-screw the screw.

Rev.171027



