



ZI-8085

Instant Heat Professional Woodburning Station

Read all instructions before use. Save these instructions.

Important Safety Precautions

1. **CAUTION** -The tool reaches high temperature! May cause burn.
2. **WARNING** - This tool must be placed on its stand when not in use.
3. Do not touch hot tip or hot metal parts when in use.
4. We strongly urge users to always rest a hot iron on the stand to prevent risk of fire. If the stand is not used, the heated tip will tilt and may burn any objects that come in contact which will result in a fire hazard.
5. Keep out of reach of children.
6. Misuse may cause burns, electric shock and injuries.
7. Do not immerse tool in water or other liquid! Danger of electric shock!
8. Always use the tool on a heatproof and uncluttered table.
9. After finished using the tool, let the tool cool naturally on safety stand in a safe place, out of reach of children.
10. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
11. Cleaning and user maintenance shall not be made by children without supervision.
12. Children should be supervised to ensure that they do not play with the tool.
13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
14. For domestic use only. Use only for the intended purposes.

Instructions for use

1. The wire safety stand is located at the bottom of the main unit.
2. Please remove the wire stand and slide into the right or left side of the main unit depending on the user's preference.
3. Select any wire tip style and insert wire tip into the pen terminals.
4. Use Philips screw driver to tighten the screws on the terminals
5. Rest the pen on the safety stand.
6. Plug in the main unit and turn the temperature control dial so the heat indicator light turns on.
7. Let the pen preheat for 15-30 seconds to reach working temperature.
8. It is recommended to always start at a lower temperature first and build up heat slowly as needed.
9. Practice on a sample piece of wood.
10. When changing the tip, please turn the temperature dial to off position.
11. Unscrew the terminal screws using Philips screw driver.
12. Use pliers to remove the wire tip to avoid burn, and insert another wire tip.
13. Use Philips screw driver to tighten the screws on the terminals
14. Always turn off and unplug the main unit after use.

DISPOSAL



This symbol indicates that the appliance shall not be disposed of with household waste, but in disposal containers provided for that purpose. Check with your local city council for recycling facilities for electrical and electronic equipment in your area.